

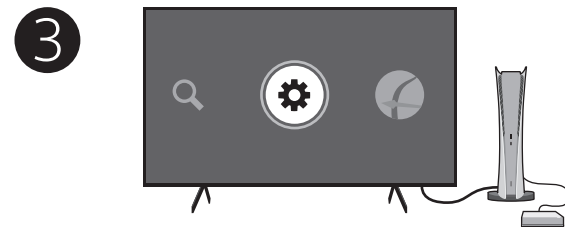
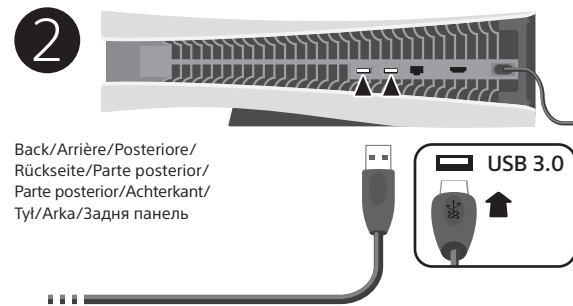
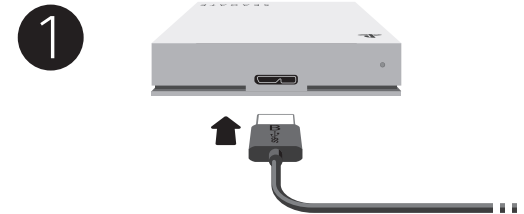


PS5® console/Console PS5®/Console PS5®/  
PS5®-Konsole/Consola PS5®/Consola PS5®/  
PS5®-console/Konsola PS5®/PS5® konsol/  
Консоль PS5®

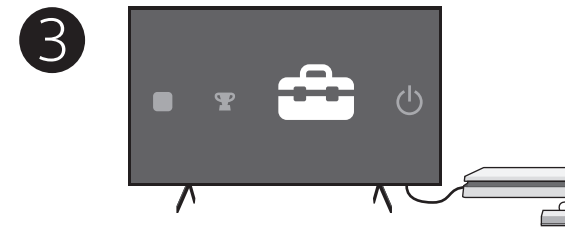


Settings > Storage > USB Extended Storage >  
Format as USB Extended Storage

PS4™ console/Console PS4™/Console PS4™/  
PS4™-Konsole/Consola PS4™/Consola PS4™/  
PS4™-console/Konsola PS4™/PS4™ konsol/  
Консоль PS4™

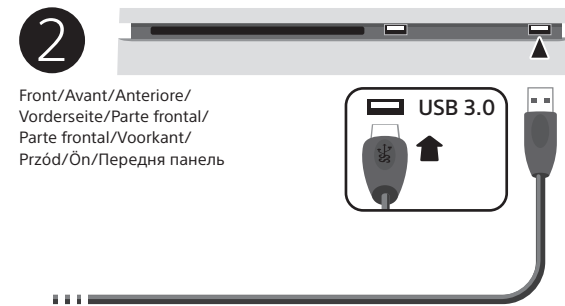

Settings > Devices > USB Storage Devices >  
Game Drive > Format as Extended Storage

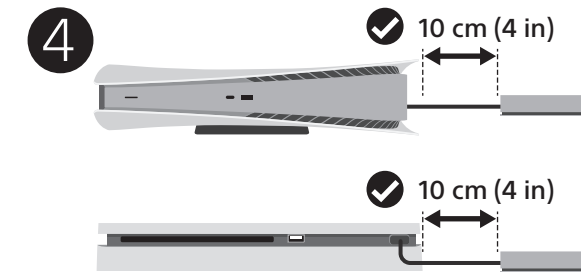

**EN** To minimize electromagnetic interference (EMI), place Game Drive at least 10 cm (4 in) from the PlayStation® console.

**FR** Pour réduire les interférences électromagnétique, placez le Game Drive à 10 cm (4 pouces) minimum de la console PlayStation®.

**IT** Per minimizzare l'interferenza elettromagnetica, posizionare l'unità Game Drive ad almeno 10 cm (4 pollici) dalla console PlayStation®.

**DE** Um elektromagnetische Interferenzen zu minimieren, sollte zwischen der Game Drive und PlayStation®-Konsole ein Abstand von mindestens 10 cm gewahrt werden.

**ES** Para minimizar las interferencias electromagnéticas, coloque la Game Drive a una distancia mínima de 10 cm de la consola PlayStation®.

**PT** Para minimizar a interferência eletromagnética, coloque o Game Drive a pelo menos 10 cm (4 pol.) de distância do console PlayStation®.

**NL** Plaats de Game Drive ten minste 10 cm van de PlayStation®-console om elektromagnetische storingen tot een minimum te beperken.

**PL** Aby zminimalizować interferencję elektromagnetyczną, umieść dysk Game Drive przynajmniej 10 cm (4 cale) od konsoli PlayStation®.

**TR** Elektromanyetik parazitleri en az 10 cm (4 inç) Game Drive'yi PlayStation® konsolundan uzaklaştırmak için.

**UA** Щоб мінімізувати електромагнітні перешкоди, розмістіть Game Drive принаймні за 10 см від консолі PlayStation®.

**EN** [WWW.SEAGATE.COM](http://www.seagate.com)

For customer support, visit [www.seagate.com/game-drive-ps-le](http://www.seagate.com/game-drive-ps-le).

**Note:** To protect your data, always follow the safe removal procedures for your operating system when disconnecting your product.

To review the details of your drive's warranty, open the Seagate Retail Limited Warranty Statement on your drive or go to [www.seagate.com/retailwarranty](http://www.seagate.com/retailwarranty). To request warranty service, get information regarding customer support within your jurisdiction (including on compatibility issues with PS5® system software version 22.02-06 or later | PS4™ system software version 4.5 or later), or to obtain information regarding the location of authorised Seagate service centers go to [www.seagate.com](http://www.seagate.com). To review the end user license agreement applicable to this drive, go to [www.seagate.com/legal-privacy/end-user-license-agreement](http://www.seagate.com/legal-privacy/end-user-license-agreement).

Sony Interactive Entertainment Europe (SIEE) exclude all liability for loss of data, loss of profit, or any loss or damage suffered by you or any third party, whether those damages are direct, indirect, consequential, special, or incidental, as a result of using this product.

#### FCC DECLARATION OF CONFORMANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### CLASS B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses, and can radiate radio

