



RM51


5U rackmount server chassis with enhanced liquid cooling compatibilit


User manual www.silverstonetek.com

Parts package component list

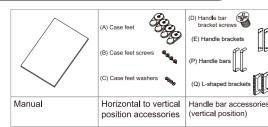

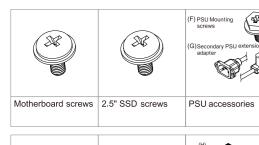

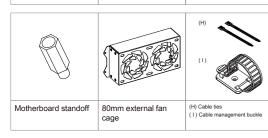


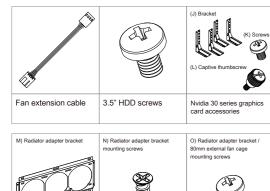


Radiator adapter bracket accessories

Hard drives and expansion card retainer installation


1. Remove 4 screws from expansion card retainer

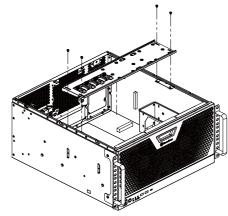


2. Expansion card retainer position shift

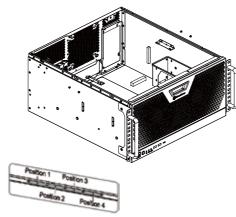


3. Install 2 x 3.5" HDD on the expansion card retainer

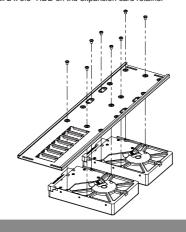

4. Install 3 x 2.5" SSD on the expansion card retainer

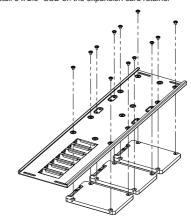



5. Install 2.5" SSD on to 2.5" SSD trays

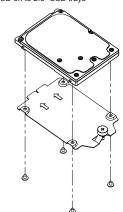


SFX PSU or 3.5" HDD installation guide

7. Adjust position of the expansion card retainer according to the 1. Remove the side mounting screws required height of the expansion card, then tighten the screws

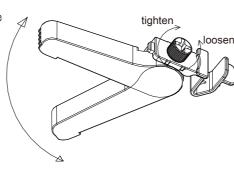


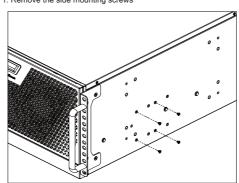

2. Shift the cage off the buckle then remove the cage

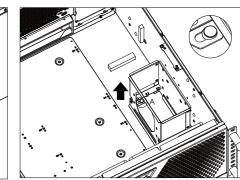

3. Insert 3.5" HDD into the cage, then secure with screws

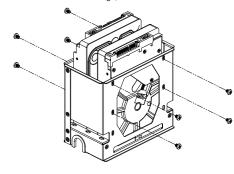

3. Once the graphics card bracket is pushed into position, tighten the thumb screw then the graphics card screw

Note: Nvidia 30 series graphics card bracket supports graphics


card length of 285mm~344mm (the total length of the graphics

card must exceed the edge of the motherboard)


6. Remove expansion card buckle

on a single motherboard)

5. To install the SFX PSU, first remove the plate that sits on the PSU extension adapter pass-through hole with a Phillips 4. Insert SFX PSU into the cage, then secure with screws (Note: To install both primary and secondary PSUs, it's recommended to purchase PP10 cables to operate both PSUs

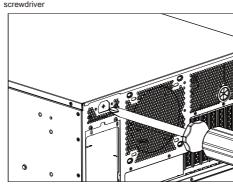


6. Insert the extension adapter cable through the rear of the pass-through hole, then fasten the screws

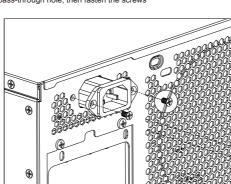


Nvidia 30 series graphics car brackets

1. Install Nvidia 30 series graphics card

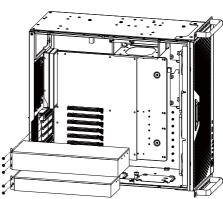


2. Install Nvidia 30 series graphics card bracket (slightly tighten the screws, and reserve space for the bracket to slide left and right

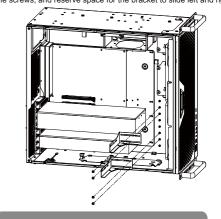


2. Mount the external fan cage to the rear of the chassis (Please run the cable through the pass-through hole first)







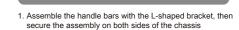

Vertical orientation installation

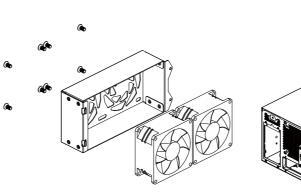

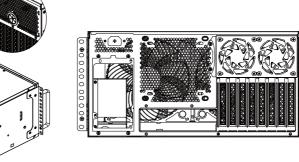


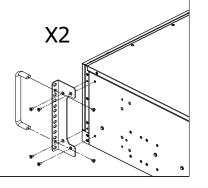


80mm external fan cage installation

1. Install 80mm fans into the cage then secure with screws


2. Install handle bar onto the flat handle bar bracket

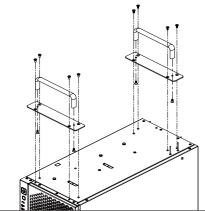


4. If a 3.5" HDD is to be installed on the expansion card retainer, it's recommended to install a SFX-L PSU due to lack of clearance of cabling

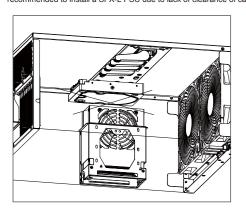


2. Install 120mm, 240mm or 360mm radiator on the bracket

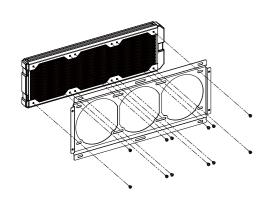


3. The maximum length limitation for graphics cards, front

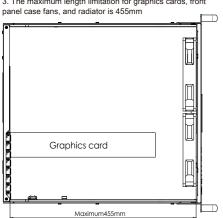


3. Install case feet (including case feet washers)

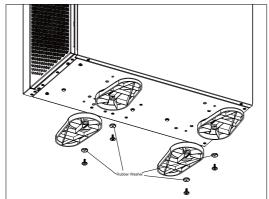

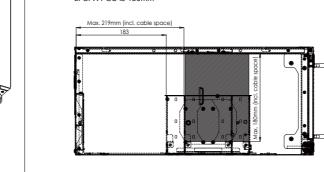


Component restrictions

1. When SFX PSU bracket is installed, the depth limitation (including adequate cable space) for the primary PSU is 219mm 1-2. The depth limitation (including adequate cable space) of SFX PSU is 180mm

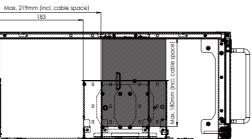


2. CPU Cooler height limit is 181mm, cooler is allowed to protrude the motherboard edge by 15mm, but if the expansion card retainer is remove, the height limitation increases to 192mm

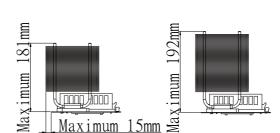

3. If 3.5" HDD are installed on the expansion card retainer, then the

3.5" HDD installed in the below cage are left with 27mm cable clearance

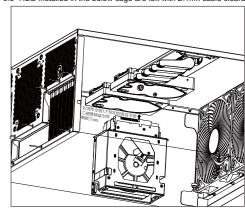


1. To install radiator at the front, please remove the front pre-installed 180mm


adiator bracket installation

Expansion card height limitation (Please take into account the power connectors)


1. Height limitation with expansion card retainer clip buckle installed

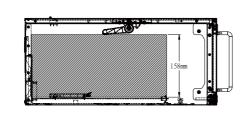

2. Height limitation with expansion card retainer clip buckle removed

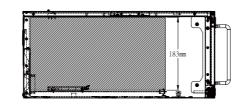


3. Height limitation with expansion card retainer removed

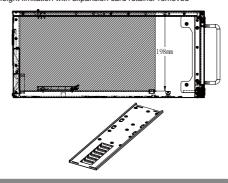


Radiator bracket installation – when 180mm fans are not used

1. Mount the 360mm radiator on to the radiator bracket

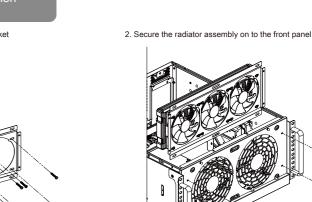


fans first

3. Mount the two 180mm fans onto the radiator bracket assembly

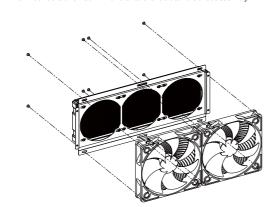

4. Mount the fan and radiator assembly onto the chassis

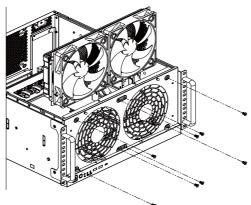

This product has a limited 1 year warrany in north America and America. For information to warranty periods in other regions, please contact your reseller or SilverStone authorized distributor. 本产品自购文之日起,于中国地区(不包含澳门,赛进特别行政区)享有一年有限技术模值(部分产品为二年,三年或五年) 详惯据国军规则是附属方列路、计时://silverStonet.com.cn/公本之产品受导为核型。

- Product component defects or damages resulted from defective production is covered under warranty.
 Defects or damages with the following conditions will be fixed or replaced under SilverStone

- 5 You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eligibility.

 6. If a problem develops during the warranty period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone http://www.silverstonetek.com.

 Please note that (i) You must provide proof of original purchase of the product by a dated itemized (or otherwise transporting) the product to SilverStone authorized distributors. SilverStone authorized distributors. SilverStone authorized distributors will bear the cost of shipping (or otherwise transporting) the product back to you after completing the warranty service; (iii) Before you send the product, you must be issued a Return Merchandes Authorization (YRMA) number from SilverStone. Updated warranty information will be Please visit http://www.silverstonetek.com for the latest updates.

Warranty Information

- 1. Product component defects or damages resulted from defective production is covered under swarranty. Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction.

 3. Usage in accordance with instructions provided in this manual, with no misuse, overuse, or other inappropriate actions.

 5) Damage not caused by his habitatic disaster (thunder, fine, earthquake, flood, salt, wind, insect, animals, etc....)

 5) Damage not caused by melled modified of fixed. Components not disassembled or replaced.

 6) Warranty markfolkders are not removed or broken.

 1. Loss or damages resulted from conditions other than ones listed above are not covered under warranty.

 2. Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other dramages or loss associated with the use of product.

 3. Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for dramages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product or incidental or consequential damage whether or not foreseable and whether or not transferable to a second hand purchaser.

 5. You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eighbilly.

Additional info & contacts

SilverStone Technology in North America may repair or replace defective product with refurbished product that is not new but has been

ent product will be warranted for remainder of the warranty period or thirty days, whichever is longer. All products should be sent

tom from the below life, and tolow its instructions, integrusiversorbetex.com/comacutus.pnp

For Australian Guyport@ailversorbetek.com)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a

You are also entities us time this year.

Please refer to above "Warranty terms & conditions" for further warranty details.

SilverStone Technology Co., Ltd. 12F No. 168 Janksang Rd., Zhonghe Dist., New Taipei City 23S Taiwan R.O.C. + 886-2-8228-1238 (star international call charges apply)

For Europe (support.eugesilverstonetek.de)

For China (support@silverstonetek.com.cn)

Tot all other regions (supportionate account)						
有毒有害物质/元素及其化学含量表						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
机壳 (金属)	0	0	0	0	0	0
风扇	0	0	0	0	0	0
线材	0	0	0	0	0	0
螺丝	0	0	0	0	0	0
白材						

本表格依据SU/T 1136的规定编制

①:表示该有毒有害物质在该部件所有均原材料中的含量均在GB/T 26572 规定的限量
要求以下。
×:表示该有毒有害物质至少在该部件的某一均原材料中的含量超出GB/T 26572 规定的



SilverStone Technology Co., Ltd.

www.silverstonetek.com

support@silverstonetek.com